
Contents

Updates	1
Maintenance items	1
June 2013 fixes	1
Checking the firmware version	1
Firmware update procedures	2

Updates

Always use the most recent firmware for this device. Please visit the TEAC web site (<http://audio.teac.com/support/downloads/>) to check for the latest firmware.

Maintenance items

June 2013 fixes

USB firmware 1.50 fixes (CDH750usb_REL1v50_101.bin)

- When copying a WMA file from a CD to a USB flash drive, an mp3 file that could not be played back by a computer would be created. This has been fixed.
- The lowest available number is used when naming new recording files. [Is the Japanese clear enough?]

Example

If files named "Audio001.MP3" and "Audio009.MP3" already exist in the AUDIO folder, the next file created during recording will be named "Audio002.MP3".

(In older firmware versions, the next file would be named "Audio010.MP3".)

CAUTION

Even when recording an MP3/WMA disc, bit rate selection appears on the recording settings screen, but the bit rate cannot be changed. Bit rate selection only affects recording from CDs to USB flash drives.


Checking the firmware version

Before updating your CD-H750, check its firmware version.

1 Press the STANDBY/ON button to put the unit into standby.

2 Press and hold the pause (II) and STANDBY/ON buttons on the main unit at the same time for at least two seconds to turn the unit on.

After "Factory RESET" appears, the firmware version is shown.

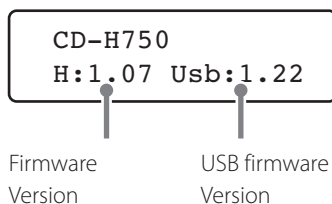

3 After checking the firmware version, press the STANDBY/ON button.

Continued on the next page ➔

Firmware update procedures

Prepare a computer that can write data to a USB flash drive that does not have anything written on it.

Warning

Take sufficient care to prevent the unit from losing power during the firmware update. If the unit should lose power during a firmware update, restarting it might not be possible or it could otherwise malfunction.

1 Download the file

Download the latest version of the firmware from the TEAC website (<http://audio.teac.com/support/downloads/>). If the downloaded file is compressed in the zip format, for example, uncompress it.

- Do not change the file name.


2 Prepare a USB flash drive for the update

Place the downloaded update firmware (CDH750usb_REL1v50_101.bin) inside the root directory.


```

¥ Root directory
└─ CDH750usb_REL1v50_101.bin
    
```


3 Press the STANDBY/ON button on the main unit to turn the unit on.

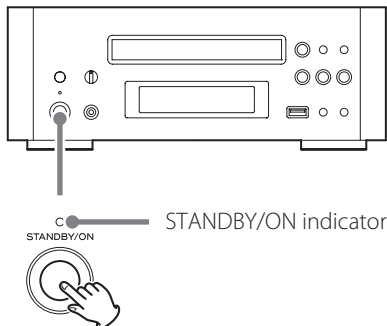

4 Press the CD/USB button to select USB.

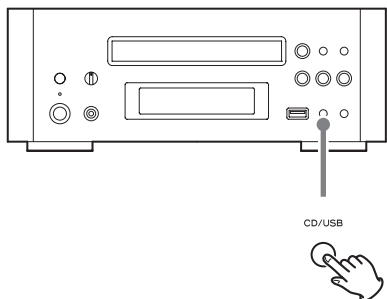

5 Connect the USB flash drive to the unit.

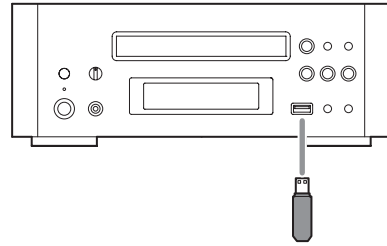

The firmware update starts.

6 After "Complete OK!!!" appears, remove the USB flash drive.

CD-H750 UPDATE
Complete OK!!!

7 Unplug the power cord from the outlet.

After waiting 10 seconds, plug the power cord into the outlet again. You can now use the unit.